

User Operation

Locate Touchmatic® electronic control panel on refrigerator between handles. Press * pad to activate control panel. All other pads, except for Alarm Off pad, remain inactive until * pad is pressed. Once activated, pads remain programmable for at least 10 minutes.

Fresh Food and Deepfreeze® controls are preset at 5. Wait 24 hours for Fresh Food and Deepfreeze® sections to reach desired temperatures. After 24 hours, adjust controls as desired. 1 is warmest setting and 9 is coldest. Refer to instructions on page 6 to set temperatures precisely.

Adjust Fresh Food or Deepfreeze® temperatures by pressing * pad then Fresh Food Temp pad or Deepfreeze® Temp pad. Press Warmer pad or Colder pad to adjust temperature setting one level at a time. Holding down Warmer pad or Colder pad adjusts temperature more than one level at a time.

Vacation Mode

Vacation mode defrosts refrigerator less often during extended non-use periods. Activate vacation mode by pressing * pad then Vacation pad. Indicator light will glow. Repeat above to deactivate vacation mode. Opening Fresh Food or Deepfreeze® door will also deactivate vacation mode.

Max Cool Mode

Max cool mode adjusts Fresh Food temperature to coldest setting. After 10 hours, Fresh Food temperature automatically returns to previous setting. Activate max cool mode by pressing * pad then Max Cool pad. Indicator light will glow. Repeat above to deactivate max cool mode before automatic reset.

Fast Freeze Mode

Fast freeze mode adjusts Deepfreeze® temperature to coldest setting. After 24 hours, Deepfreeze® temperature automatically returns to previous setting. Activate fast freeze mode by pressing * pad then Fast Frz pad. Indicator light will glow. Repeat above to deactivate fast freeze mode before automatic reset.

Entry Tone

Entry tone indicates a pad was pressed and command was read and accepted. Deactivate entry tone by pressing and holding * pad for three to five seconds. Three short beeps indicate instructions were accepted. Repeat above to activate entry tone.

Door Open Alarm

Door open alarm sounds and glowing indicator light blinks if either door is open for three minutes. Deactivate door open alarm by pressing Alarm Off pad or by closing either door. Activate door open alarm by pressing * pad then holding Alarm Off pad for three to five seconds. Three short beeps will sound. Repeat above to deactivate door open alarm indefinitely.

