

User Operation

Stor-Mor[®] System

1. Remove shelves and baskets by lifting and pulling out.
2. Replace shelves and baskets by reversing step 1.

Door Dike


1. Remove door dike by pulling forward and snapping out.
2. Replace door dike by aligning clips with holes on Deepfreeze[®] door. Push until dike locks in place.

Setting Controls

This refrigerator operates most efficiently in normal household temperatures of 12° to 43°C.

Fresh Food and Deepfreeze[®] Controls (nonelectronic models)

Locate Fresh Food and Deepfreeze[®] controls on upper rear wall of Fresh Food section. When Deepfreeze[®] control is set to *off*, neither Fresh Food nor Deepfreeze[®] sections will cool. Initially, set both controls to 4. Wait 24 hours for Fresh Food and Deepfreeze[®] sections to reach desired temperatures. After 24 hours, adjust controls as desired. 1 is warmest setting and 7 is coldest.

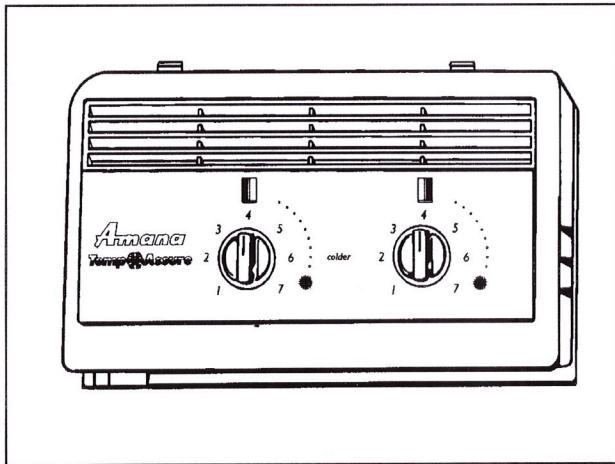

Set temperatures precisely using a household thermometer that includes temperatures between -20.5° to 10°C.

Put thermometer snugly between frozen packages in Deepfreeze[®] section. Wait 5-8 hours. If Deepfreeze[®] temperature is not -18° to -17°C, adjust control, one number at a time. Check again after 5-8 hours.

Put thermometer in a glass of water in middle of Fresh Food section. Wait 5-8 hours. If Fresh Food temperature is not 3° to 4°C, adjust control, one number at a time. Check again after 5-8 hours.

Touchmatic[®] Electronic Controls (electronic models)

Confirm power switch is on before programming. Remove toe grille and locate black box in center of cabinet. Power switch is on right side of box.

